

THIS MACHINE IS AN AERIAL WORK PLATFORM, DESIGNED TO OPERATE ON CONSTRUCTION SITES, IN WORKSHOPS OR IN INDUSTRIAL WAREHOUSES.



**⚠ IMPORTANT ⚠**

*This document is a short recap on how to operate an aerial work platform and should in no way be substituted for the manual required by Directive 2006/45/EC, which should be read and understood by the operator beforehand and stored in the platform.*

*All the instructions, including the safety instructions, described in the manual but not included in this document should be implemented and enforced. The operator must have received proper training to use the machine.*


**TECHNICAL SPECIFICATIONS (STANDARD PLATFORM)**

WEIGHT OF THE MACHINE	
- Unladen	1,500 kg (3,310 lbs.)
- Under nominal load	1,730 kg (3,817 lbs.)
CAPACITY OF THE PLATFORM	
- 2 people (indoor use)	230 kg (507 lb.)
- 1 person (outdoor use)	230 kg (507 lb.)
CAPACITY OF THE EXTENSION	
- 1 person	115 kg (254 lb.)
MACHINE SPEED	
- Working speed	0.8 km/h (0.5 mph)
- Transport speed 1	2.5 km/h (1.56 mph)
- Transport speed 2	4.5 km/h (2.8 mph)

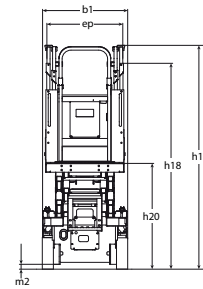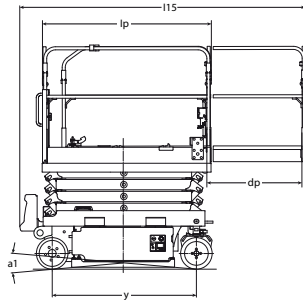

DIMENSIONS	
- l15	2,760 mm
- lp	1,640 mm
- dp	900 mm
- y	1,400 mm
- b1	815 mm
- ep	750 mm
- h17	2,170 mm
- h18	1,990 mm
- h20	1,020 mm

**GROUND CONTROL PANEL**

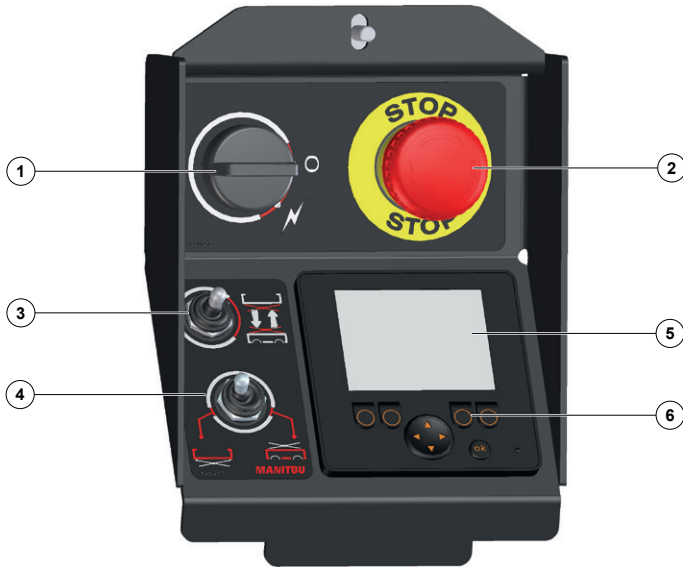

- 1 - KEY SWITCH
- 2 - EMERGENCY STOP BUTTON
- 3 - PLATFORM LIFTING/LOWERING ACTIVATION SWITCH
- 4 - CONTROLS ACTIVATION SWITCH
- 5 - GROUND DISPLAY SCREEN
- 6 - GROUND DISPLAY SCREEN CONTROL KEYS

**CONTROL PANEL IN THE PLATFORM**



- 1 - DRIVING/STEERING CONTROL HANDLE
- 2 - ACTIVATION TRIGGER
- 3 - HORN PUSHBUTTON
- 4 - EMERGENCY STOP BUTTON
- 5 - ACTIVATION SWITCH
- 6 - DRIVING SPEED SWITCH
- 7 - PLATFORM DISPLAY SCREEN
- 8 - OVERLOAD INDICATOR LIGHT
- 9 - FAULT INDICATOR LIGHT
- 10 - TILT INDICATOR LIGHT


**⚠ IMPORTANT ⚠**

Operators should be aware of the risks connected with using the machine, notably:

- Risk of losing control.
- Risk of losing stability.

While the machine is in use, a safety helmet must be worn and it is strongly recommended to wear a safety harness.

**MACHINE MANOEUVRES**

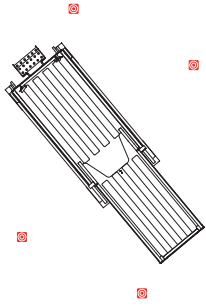


**⚠ IMPORTANT ⚠**

Do not use the machine if the wind speed is over 45 km/h.

Before using the machine:

- Check the condition of the ground and the bearing surfaces.
- Mark out the machine's area of manoeuvre.

**PLATFORM EXTENSION**

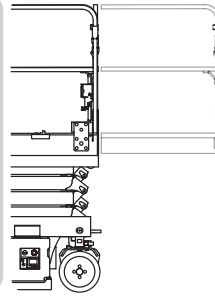


**⚠ IMPORTANT ⚠**

Do not stand on the extension while opening/retracting it. The platform extension must be latched when operating the machine.


**ELECTRICAL HAZARD**

**⚠ IMPORTANT ⚠**

Never stand or work in the vicinity of any electrical sources.

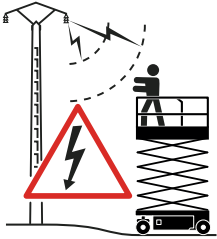

**TILT AND OVERLOAD**

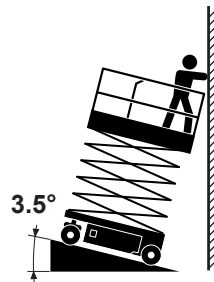

**MAXIMUM AUTHORISED FRAME TILT: 3.5°**

When the frame is tilted by more than the maximum authorised value:

- The tilt indicator flashes in transport position.
- The tilt indicator lights on in work position.
- A warning page is displayed.
- The audible alarm sounds intermittently.

**EXCESSIVE LOAD IN THE PLATFORM**

When the load in the platform has reached the maximum load capacity:

- The overload light flashes.
- An alert page is displayed.
- The audible alarm sounds continuously.

**EMERGENCY CONTROLS**

**⚠ IMPORTANT ⚠**

Activate the machine functions with extreme caution and check for obstructions at all times.

A person can activate machine functions from the ground when the operator can no longer operate from the platform.


If the machine is working:

- Push and hold the activation switch to the right.
- Press and hold the appropriate control keys to activate machine functions
- Release the activation switch.




In the event of machine breakdown:

- Locate the rescue control at the rear of the machine.
- Pull the lever of the rescue pump and release it.
- Repeat the operation until the lifting structure is fully lowered.

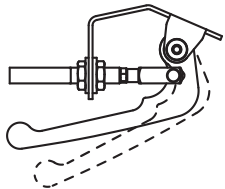

**MOVEMENT AMPLITUDE**

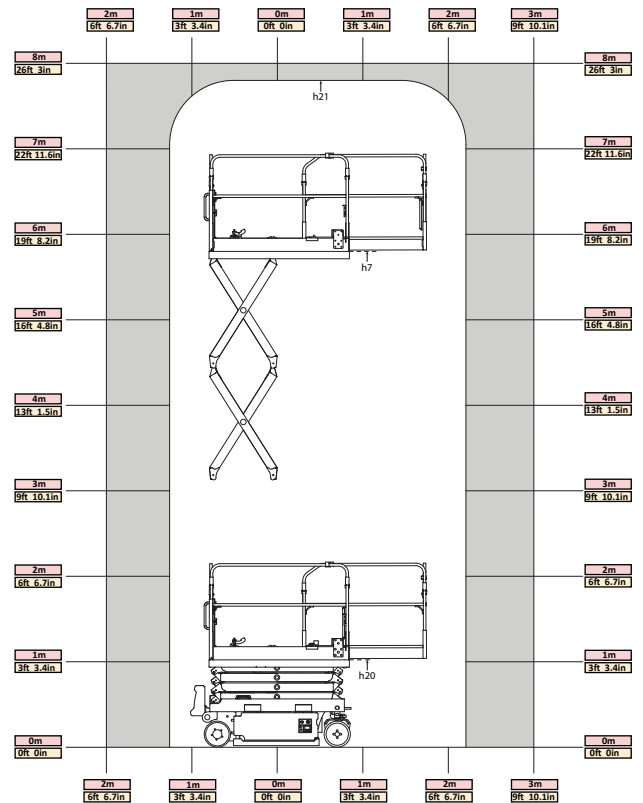

**DAILY MAINTENANCE**

1 - GENERAL INSPECTION

2 - BATTERY CHARGE LEVEL

3 - HYDRAULIC OIL LEVEL

4 - BATTERY FLUID LEVEL

5 - MACHINE OPERATION

