

this machine is a semi-industrial lift truck designed to operate on prepared ground or on industrial sites.

BASIC INSTRUCTION SHEET



52683724EN (25/09/2020)

This document is a short recap on how to drive the machine, and should in no way be a substitute for the instructions required by Directive 2006/42/EC Annex I section 1.7.4. The instructions, which should be read and understood by the operator beforehand, are available in the machine's cab. All of the instructions, including safety instructions, in this manual should be implemented and enforced. The operator must have received proper training and must comply with the rules in force on road traffic.



Technical specifications

		MC 25-2	MC 25-4	MC 30-2	MC 30-4
WEIGHT OF MACHINE WITH STANDARD ATTACHMENT(transport position)					
Unladen	kg	4,003	4068	4368	4438
At rated load	kg	6503	6568	7368	7438
At rated load on front axle	kg	5729	5736	6432	6514
At rated load on rear axle	kg	894	952	936	1057
Unladen on front axle	kg	1606	1616	1654	1736
Unladen on rear axle	kg	2397	2455	2714	2835
DRAWBAR PULL ON THE COUPLING HOOK					
At rated load	daN	1800	3260	1680	3266
Unladen	daN	910			
DIMENSIONS					
x	mm	621		626	
y	mm		1900		
h1	mm		2338		
h6 (standard height)	mm		2155		
h6* (low height)	mm		1990		
l	mm		1200		
l2	mm	3045		3085	
b1	mm		1450		
b10	mm		1159		
b11	mm	1112	1176	1112	1176
Ast (pallet 1,000 wide x 1,200)	mm	4641	5426	4676	5461
Wa	mm	2620	3405	2650	3435

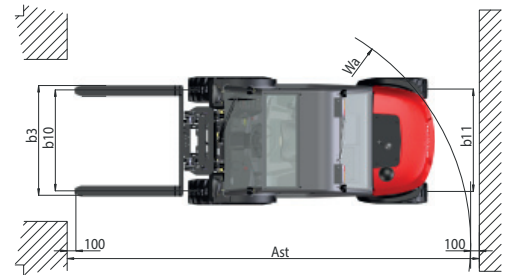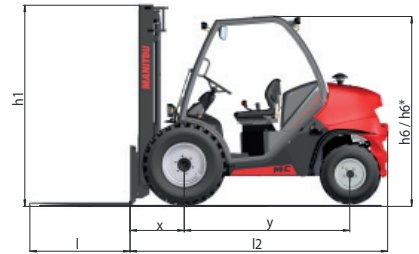

Before starting, check:


- The condition of the tyres.
- The lights.
- The cleanliness and adjustment of rear-view mirrors.
- The hydraulic oil level.
- The engine oil level.
- The air filter.
- The fuel level.

Starting the machine

- 1 - Get into the machine, facing the driver's cab, and close the door (depending on option).
- 2 - Sit down in the seat and lock the seat belt.
- 3 - Unlatch the battery cut-off.
- 4 - Deactivate the emergency stop button.
- 5 - Put the reversing shift into neutral.
- 6 - Turn the ignition key.
- 7 - Activate the forward/neutral/reverse gear selector (FNR) to move forwards or backwards.

Dashboard handset

A warning lamp indicates an operating fault. Some indicator lamps are accompanied by an audible signal. Stop the machine and contact your dealer or rental company as quickly as possible.

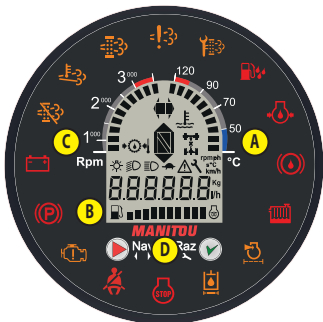

A Engine water temperature	Engine shut down indicator lamp	Water in fuel pre-filter warning indicator lamp
B Fuel level	Hydraulic return oil filter clogging indicator lamp	Particle filter maintenance indicator lamp
C Rev counter	Air filter clogging indicator lamp	Particle filter fault indicator lamp
D Multifunction screen navigation	Not used	Particle filter activated lamp
Battery charge indicator lamp	Not used	High gas temperature indicator lamp
Parking brake lamp	Not used	Particle filter deactivated lamp
Engine fault indicator lamp	Engine oil pressure indicator lamp	
Seat belt indicator lamp		

Switches

Parking brake applied	Additional hydraulic attachments (option)	Front working lights (option)
automatic parking brake	2 driving wheels (fast speed) MC ..-4	Rotating beacon light (option)
Forced particle filter regeneration	4 driving wheels (slow speed) MC ..-4	Rear working lights (option)
Particle filter regeneration deactivated	Differential lock MC ..-4	Rear defrost (option)
Hydraulic movement neutralisation (option)	Hazard warning lights (option)	




Please note that the risks involved for users when using the machine are, in particular:

- Risk of loss of control, risk of loss of lateral and frontal stability of the machine,
- The operator must remain in control of the machine. In the event of the machine overturning, do not try to leave the cab during the incident.

YOUR BEST PROTECTION IS TO STAY FASTENED UNDER THE OVERHEAD GUARD OR IN THE CAB.

Hydraulic controls and movement of the machine

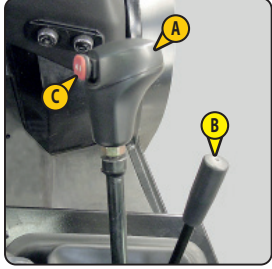

Using the hydraulic controls is only possible if the driver is present and seated correctly in the seat.

- A - Lifting and tilting control lever
- B - Attachment control lever (option) *
- C - Forward/Neutral/Reverse gear selector

(*) Consult the operator's manual for the machine.

Safety for moving the machine

Movement of the machine is only authorised if the operator is present.

To move the machine, the following sequence must be observed:

- 1 - Sit down correctly in the driver's seat,
- 2 - Lock the seat belt,
- 3 - Release the parking brake,
- 4 - Engage forward or reverse gear.

To stop the machine, the following sequence must be observed:


- 1 - Set the forward/reverse selector to neutral,
- 2 - Engage the parking brake,
- 3 - Unlock the seat belt,
- 4 - Get out of the machine.

If the operator leaves the driver's cab with forward or reverse gear in operation:

- If the alarm emits 1 beep, the operator may sit back in the seat and continue moving.
- If the alarm emits 2 beeps, the operator must sit back in the seat and reset the forward/reverse selector to neutral and release the parking brake before continuing to move.

N.B.: Depending on the model, a safety device on the seat belt fastener prevents movement. A beep signals it is in operation.

Reading a load chart

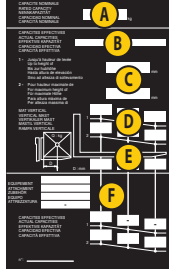


Refer to and comply with the machine's load chart(s).

- A - Maximum weight of the load
- B - Standard and directive
- C - Load lifting height (1 and 2)
- D - Weight of the load (1 and 2)
- E - Load outreach distance
- F - Value with additional attachment (option)

Attachments




Before any use, ensure that the attachment is properly locked.

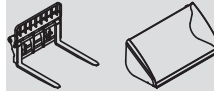

See the operator's manual for the machine for gripping and the list of attachments.


Stowage

Check that the safety instructions relating to the flatbed have been correctly applied before loading the machine and that the transport company is informed about the dimensions and the weight of the machine.

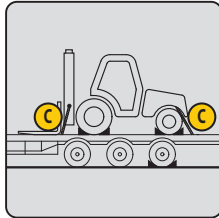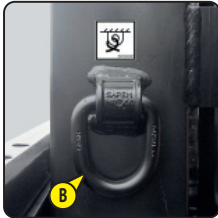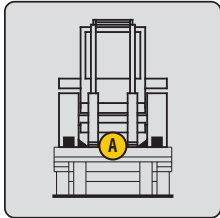

- A - Fix the chocks to the platform at the front and at the back of each tyre.
- A - Also fix the chocks to the platform on the inside of each tyre.
- B - Secure the machine on the platform using strong enough straps and the anchorage points provided.
- C - Tighten the straps.

Fuses and relays

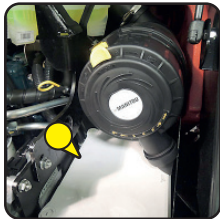

See the operator's manual for the machine for the full list of fuses.


Lifting the engine cover




With the cab option, open the side doors before opening the engine cover.

- A - Fold the backrest onto the seat.
- B - Move the seat forward as far as possible.

Daily maintenance

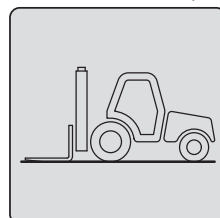


Carry out a general inspection of the machine.

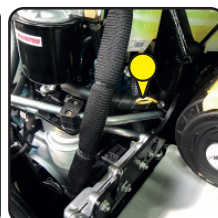

Check the engine oil level.



Check the coolant level.

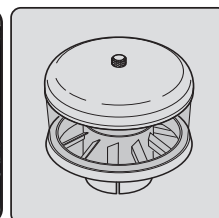

Clean the cyclonic pre-filter (option).

Scan for more information.

